numatics[®]

Delta 901 Series

Premium Filters





www.numatics.com



青岛秉诚自动化设备有限公司 地址:中国·青岛市重庆南路99号海尔云街甲3号楼7F

服务热线:4006-918-365 网址:http://www.ivalve.cc 传真:(86-532)585-10-365 Email: sales@bechinas.com

Table of Contents



Delta 901 Series

Features and Benefits	3
Science of Coalescing Filtration	4
Water Separator	
How to Order - Water Separator	6
Pressure and Temperature Specifications - Water Separators	6
3.0 Micron Particulate Filter	7
1.0 Micron Coarse Coalescer	8
0.01 Micron Fine Coalescer	9
0.01 Micron Ultra Fine Coalescer	10
Adsorbing Grade Filter	11
How to Order - Filters: Particulate, Coalescing, Adsorbing	12
Pressure and Temperature Specifications - Particulate, Coalescing, Adsorbing	12
Recommended Filter Combinations - Industry Applications	
ISO Classifications Chart	 13
Separator and Filter Dimensions - Std. Manual Drain / Mounting Bracket Dimensions	 14
Separator and Filter Dimensions - Option "W" External Auto Drain Included	15
Replacement Parts and Kits	 16



青岛秉诚自动化设备有限公司 地址:中国·青岛市重庆南路99号海尔云街甲3号楼7F

传真:(86-532)585-10-365 服务热线:4006-918-365 网址:http://www.ivalve.cc Email: sales@bechinas.com

Premium Filters



Features and Benefits



The Numatics Delta Series[™] offers premium filtration for applications which require high flows. The standard aluminum end caps on every element, premium manual drain, seals made of Fluorocarbon (FKM), and available 3 micron internal pleated prefilter sets the Delta Series[™] apart from our competition. The Delta series premium filters are CRN registered (CRN# 0H12256.5C - Port sizes 1/4 to 2).

Delta Series™ filters are ideal for use in many applications including industrial, process, medical, and are perfectly suited for compressor applications.

General Purpose Filtration

- Civil engineering
- Rock quarrying
- Shot blasting
- Prefiltration for oil removal on dryers
- Industrial

Oil-free Compressed Air Application

- Spray painting
- Air conveying
- Air motors
- Process control
- Blow moldings
- Pre-filter for vacuum pumps

Critical Applications

- · Breathing air
- Process air
- Food industry
- Breweries
- Hospital service
- Dryer
- Medical applications
- Film processing

The Numatics Delta Series™ coalescing filters use a borosilicate glass fiber to remove contaminant from air lines. Air flows from the inside to the outside of the element through a converging/diverging pore structure, trapping

contaminant particles in the media (not just on the surface) and forcing liquids to form into larger drops and drain to the bottom of the bowl. Numatics filters are used to remove hydrocarbon, oil, liquid water, rust, and more. The coalescing filters are made up of eight main features:

1. Inner core

Prevents element from collapsing in backflow conditions

2. Optional internal pleated prefilter

3.0 micron media protects the fine borosilicate fibers from large particles, extending the life of the coalescing media

3. Inner media wrap

Allows crossflow of gas, which initiates the coalescing process

4. Media

Three coalescing media choices for best performance. Proprietary glass fiber blend combines low differential pressures and high efficiencies with maximum holding capacity (3 micron particulate and adsorbing grade also available)

5. Outer media wrap

Allows crossflow of gas and improves performance

6. Metal retainers

Supports the media both inside and outside during pressure spikes or high differential pressures

7. Drain laver

Large pore fibers allow the large coalesced liquids to drain to the bottom of the bowl

8. End caps


Aluminum end caps provide sturdiness and durability. All elements are clearly engraved with their model number.



Premium Filters




The science of coalescing filtration

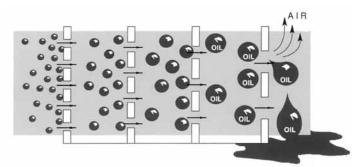

Air flows from the inside to the outside of the element through progressively larger openings in the media. As contamination moves through the element, solid particles are trapped and liquids are formed into large droplets. As the air exits the element, surface tension holds the liquids and allows them to drain to the bottom.

The Numatics 0.01 micron borosilicate glass fiber element, when magnified 228x (left), shows deep, tortuous paths and large air pockets which provide high performance contaminate removal and longer life.

Contamination removal from a typical compressed air line with 0.01 micron Numatics media is shown magnified 40x (right). The contamination contains hydrocarbon (black), oil (opaque drops), and metal fragments (shiny spots).

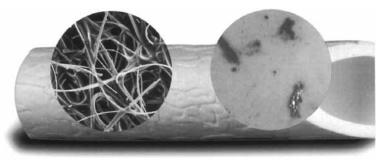


Scanning electron micrograph (at 228x)

Dirty filter magnification (at 40x)


With Numatics elements like the one on the left installed in your system, the contamination on the right won't get to where it can cause damage. Your system lasts longer and costs less.

What you get is not always what you see

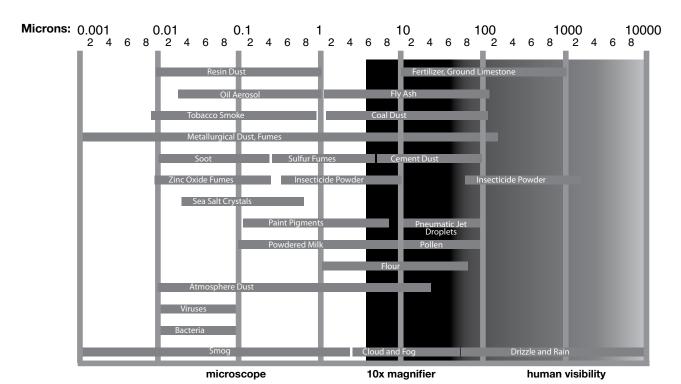



F901X-12 pictured



Water Separators - F901X Series

Application:

The water separator is an ideal solution where water contamination is present. Water can damage pneumatic components, degrade your final product, and cause valves and cylinders to stick.

The water separator utilizes an internal spinner to remove large quantities of contamination by centrifugal action. Water, debris, and rust are spun outward to the inside diameter of the bowl. Gravity then sends the contaminant to the bottom of the bowl for discharge.

Recommended Uses:

- Bulk liquid and solid contamination removal
- Downstream from compressor/aftercoolers
- Protection for coalescing elements from large liquid loading
- Refrigerated compressed air dryers

Materials of Construction:

Head 1/4 - 3: A380.0 Cast Aluminum - Anodized Bowl 1/4 - 3: A380.0 Cast Aluminum - Anodized

Internal Separator Components: A380.0 Cast Aluminum - Anodized

Seals: Fluorocarbon (FKM) Standard Manual Drain: Brass

Flow Ratings - Water Separator

Port Size	SCFM	m ³ /h	4 D
PUIT SIZE	Based on 100	ΔP	
1/4	30	51	0.75 PSID
1/2	90	153	0.75 PSID
3/4	165	280	0.75 PSID
1	215	365	0.75 PSID
1-1/2	353	600	0.75 PSID
2	706	1200	0.75 PSID
3	1294	2200	0.75 PSID

Note: Maximum water removal efficiency occurs at stated flows


网址:http://www.ivalve.cc

Email: sales@bechinas.com

Water Separator



How to Order - Water Separators

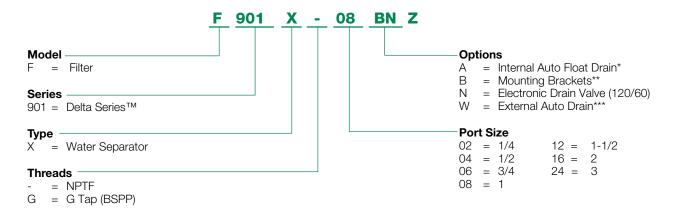

- * Applies to 1/4" to 2" Models Only
- ** Applies to 1/4" to 1-1/2" Models Only
- *** Applies to 2" and 3" Models Only

Pressure and Temperature Specifications - Water Separators

Separator Option	None	A	N	W
Type - X	None	Float Drain	Elect. Drain	Ext. Drain
Port Size	All	1/4 to 2	1/4 to 3	2, 3
Max. Pressure PSI (Bar)	250 (17)	250 (17)	250 (17)	230 (16)
Max. Temperature °F (°C)	200 (95)	150 (66)	130 (55)	120 (50)

Note: Option combinations default to lower pressure and temperature rating.

Particulate Grade Filter





ISO CLASS 3 7

Particulate Filter - 3.0 Micron - F901G Series



ANSI SYMBOL

Application:

The particulate filter is designed for heavy dirt loading. Large particles such as rust, desiccant dust, and debris will often reduce the life of pneumatic components. Contaminant is generated from desiccant type air dryers, older carbon steel pipes, and from the intake of a compressor.

The particulate 3.0 micron filter element features a pleated design - consisting of cellulose composite media which provides a large amount of surface area and extends the life of the element. When air flows - from the outside of the element to the inside, the particles are trapped in the space between the filter bowl and the element.

Recommended Uses:

- Solid bulk contamination removal
- Afterfilter to a desiccant dryer
- Protection for coalescers in heavy aerosol applications
- 3 micron particle removal in 'dry' systems

Specifications: { Per ISO 12500 at 33.2 ppm Inlet (40 mg/m³) }

• Solid Particle Efficiency: 97.5%

• Maximum Solid Particle Size: 3 µm

• Maximum Solid Concentration: 1.0 mg/m3 / (0.8375 ppm)

• Flow Path: Outside To Inside Of Element

Materials of Construction:

Filter Particulate:

Head 1/4 - 3: A380.0 Cast Aluminum
Bowl 1/4 - 1: A380.0 Cast Aluminum
Bowl 1-1/4 - 3: A356.0-T6 Cast Aluminum

Seals: Fluorocarbon (FKM)
Standard Manual Drain: Brass

Note: Heads and Bowls – Anodized

Particulate Element:

End Caps: 6061-T6511 Anodized Aluminum

Element: Phenolic Cellulose Pleat

End Cap Bonding Material: Epoxy Resin Support Cores: Galvanized Carbon Steel

Flow Ratings

Port Size	SCFM	m ³ /h	ΛР
Purt Size	Based on 100 l	ΔΡ	
1/4	52	88	1.5 PSID
3/8	67	114	1.5 PSID
1/2	86	146	1.5 PSID
3/4	190	323	1.5 PSID
1	305	518	1.5 PSID
1-1/4	495	841	1.5 PSID
1-1/2	606	1030	1.5 PSID
2	1155	1962	1.5 PSID
2-1/2	1485	2523	1.5 PSID
3	1856	3153	1.5 PSID

Note: Maximum efficiency occurs at stated flows.

7

Coarse Grade Coalescing Filter





ISO CLASS

Coalescing Filter - 1.0 Micron (Coarse Grade) - F901H Series



Application:

The coarse coalescing filter is utilized when low pressure drop or crude separation is required. The coarse filter element is preferred in low pressure and vacuum application so that the efficiency of the compressor or pump is not sacrificed. Also, the coalescing element will take out crude amounts of large liquid oil and water particles, specifically downstream of a compressor to protect a dryer. The coalescing 1.0 micron coarse grade filter element features a unique vacuum-formed process. It utilizes micro-glass fibers in raw form to create a seamless, depth-loading media. Combined with a rigid fiber-binding epoxy, the filter element has great strength and high efficiency.

Recommended Uses:

- Mainline plant filtration
- Prefilter to refrigerated air dryer
- 1 micron particle removal in 'dry' systems
- Heavy oil concentration removal

Specifications: { Per ISO 12500 at 33.2 ppm Inlet (40 mg/m³) }

• Coalescing Efficiency = 95.0%

• Maximum Solid Particle Size: 1.0 µm

• Maximum Solid Concentration: 2.8 mg/m3 / (2.3 ppm)

Maximum Oil Concentration: 2.0 mg/m3 / (1.66 ppm)

• Flow Path: Inside to Outside Of Element

Materials of Construction:

Filter Coalescing:

Head 1/4 - 3: A380.0 Cast Aluminum Bowl 1/4 - 1: A380.0 Cast Aluminum

Bowl 1-1/4 - 3: A356.0-T6 Cast Aluminum

Seals: Fluorocarbon (FKM) Standard Manual Drain: Brass

Note: Heads and Bowls - Anodized

Coalescing Element:

End Caps: 6061-T6511 Anodized Aluminum

Element: Borosilicate Glass Fibers End Cap Bonding Material: Epoxy Resin Support Cores: Galvanized Carbon Steel

Drain Layer: Polyester

Flow Ratings:

Port Size	SCFM	m ³ /h	ΛP
Purt Size	Based on 100 F	ΔΡ	
1/4	49	83	1.5 PSID
3/8	59	100	1.5 PSID
1/2	75	127	1.5 PSID
3/4	160	272	1.5 PSID
1	256	435	1.5 PSID
1-1/4	480	816	1.5 PSID
1-1/2	576	979	1.5 PSID
2	1120	1903	1.5 PSID
2-1/2	1440	2447	1.5 PSID
3	1800	3058	1.5 PSID

Note: Maximum efficiency occurs at stated flows.



Fine Grade Coalescing Filter





ISO CLASS

Coalescing Filter - 0.01 Micron (Fine Grade) - F901D Series



Application:

The fine coalescing filter is utilized when clean air is required and longer component life is desired. It is recommended in most point-of-use applications for industrial use. Also, the fine coalescer removes small particles of oil, water, and rust that can create problems in painting and coating processes. The coalescing 0.01 fine grade filter element features a unique vacuum-formed process. It utilizes micro-glass fibers in raw form to create a seamless, depth-loading media. Combined with a rigid fiber-binding epoxy, the filter element has great strength and high efficiency.

Recommended Uses:

- Paint spraying
- Pneumatic tools and instrumentation
- Robotics
- 0.01 micron particle removal in 'dry' systems
- Low oil concentration removal

Specifications: { Per ISO 12500 at 33.2 ppm Inlet (40 mg/m3) }

- Coalescing Efficiency = 99.975%
- Maximum Solid Particle Size: 0.01 µm
- Maximum Solid Concentration: 0.1 mg/m3 / (0.08 ppm)
- Maximum Oil Concentration: 0.01mg/m3 / (0.008 ppm)
- Flow Path: Inside to Outside Of Flement

Materials of Construction:

Filter Coalescing:

Head 1/4 - 3: A380.0 Cast Aluminum Bowl 1/4 - 1: A380.0 Cast Aluminum Bowl 1-1/4 - 3: A356.0-T6 Cast Aluminum End Cap Bonding Material: Epoxy Resin

Seals: Fluorocarbon (FKM) Standard Manual Drain: Brass

Note: Heads and Bowls - Anodized

Coalescing Element:

End Caps: 6061-T6511 Anodized Aluminum

Element: Borosilicate Glass Fibers

Support Cores: Galvanized Carbon Steel

Drain Layer: Polyester

Flow Ratings:

Port Size	SCFM	m ³ /h	ΔΡ
	Based on 100 l	PSI (7 bar) inlet	
1/4	31	53	1.5 PSID
3/8	45	76	1.5 PSID
1/2	51	87	1.5 PSID
3/4	100	170	1.5 PSID
1	130	221	1.5 PSID
1-1/4	253	430	1.5 PSID
1-1/2	309	525	1.5 PSID
2	635	1079	1.5 PSID
2-1/2	828	1407	1.5 PSID
3	947	1609	1.5 PSID

Note: Maximum efficiency occurs at stated flows.

9

Ultra Fine Grade Coalescing Filter





ISO CLASS $\Pi \sqcap \Pi$



Coalescing Filter - 0.01 Micron (Ultra Fine Grade) - F901E Series

ANSI SYMBOL

Application:

The ultra fine coalescing filter is ideal where critically clean air is needed and pressure drop is not a concern. It is a polishing filter to clean up any remains of particles or oil that are left over from the compressor room filtration. It is mainly a point-of-use filter that is targeted specifically for critical processes. The coalescing 0.01 ultra fine filter element features a unique vacuum-formed process. It utilizes micro-glass fibers in raw form to create a seamless, depth-loading media. Combined with a rigid fiber-binding epoxy, the filter element has great strength and high efficiency.

Recommended Uses:

- Blow molding plastics
- Semiconductor packaging
- Critical instrumentation
- 0.01 micron particle removal in 'dry' systems
- Low oil concentration removal

Specifications: { Per ISO 12500 at 33.2 ppm Inlet (40 mg/m3) }

• Coalescing Efficiency = 99.99%

• Maximum Solid Particle Size: 0.01 μm

Maximum Solid Concentration: 0.008 mg/m3 / (0.006 ppm)

Maximum Oil Concentration: 0.004 mg/m3 / (0.003 ppm)

• Flow Path: Inside to Outside Of Element

Materials of Construction:

Filter Coalescing:

Head 1/4 - 3: A380.0 Cast Aluminum Bowl 1/4 - 1: A380.0 Cast Aluminum Bowl 1-1/4 - 3: A356.0-T6 Cast Aluminum

Seals: Fluorocarbon (FKM)

Standard Manual Drain: Brass

Note: Heads and Bowls - Anodized

Coalescing Element:

End Caps: 6061-T6511 Anodized Aluminum

Element: Borosilicate Glass Fibers

End Cap Bonding Material: Epoxy Resin Support Cores: Galvanized Carbon Steel

Drain Layer: Polyester

Flow Ratings:

Port Size	SCFM	m ³ /h	ΔΡ
	Based on 100 F	PSI (7 bar) inlet	
1/4	23	39	1.5 PSID
3/8	28	48	1.5 PSID
1/2	35	59	1.5 PSID
3/4	70	119	1.5 PSID
1	110	187	1.5 PSID
1-1/4	180	306	1.5 PSID
1-1/2	216	367	1.5 PSID
2	420	714	1.5 PSID
2-1/2	540	917	1.5 PSID
3	675	1147	1.5 PSID

Note: Maximum efficiency occurs at stated flows.



Vapor Adsorbing Grade Filter





ISO CLASS 4 4

Vapor Adsorbing Filter - F901F Series

Application:

The adsorbing filter removes oil and larger hydrocarbon vapor from the compressed air stream. Since it only removes vapor, a coalescing element, specifically the F901D, should be used immediately upstream of the adsorbing filter. Since optimum adsorption occurs at lower temperatures, it is recommended to apply the filter as close to the point-of-use as possible. The fine grade features fine activated charcoal impregnated on polyester media. The activated carbon particles have a high affinity to vapor and are extremely efficient due to the tremendous amount of surface area present. The adsorbing element should be changed every 3 to 6 months depending on the application.

Recommended Uses:

- Breathing air applications
- Food and drug industries having direct product contact with exhaust air
- Odor-free air applications
- Heavier hydrocarbon vapor removal

Specifications:

- Efficiency: 90.0% at Maximum Flow
- Maximum Oil Vapor Concentration: 0.003 ppm based on 0.015 ppm Inlet
- Coalescing Prefilter Recommended
- Flow Path: Outside to Inside Of Element

Materials of Construction:

Filter Adsorbing:

Head 1/4 - 3: A380.0 Cast Aluminum Bowl 1/4 - 1: A380.0 Cast Aluminum

Bowl 1-1/4 - 3: A356.0-T6 Cast Aluminum Seals: Fluorocarbon (FKM)

Standard Manual Drain: Brass

Note: Heads and Bowls - Anodized

Adsorbing Element:

End Caps: 6061-T6511 Anodized Aluminum

Element: Activated Carbon

End Cap Bonding Material: Epoxy Resin Support Cores: Galvanized Carbon Steel

Outer Drain Layer: Polyester

Flow Ratings:

Port Size	SCFM	m ³ /h	ΔΡ		
	Based on 100 I	Based on 100 PSI (7 bar) inlet			
1/4	29	49	1.5 PSID		
3/8	63	107	1.5 PSID		
1/2	79	134	1.5 PSID		
3/4	120	204	1.5 PSID		
1	182	309	1.5 PSID		
1-1/4	300	510	1.5 PSID		
1-1/2	360	612	1.5 PSID		
2	700	1189	1.5 PSID		
2-1/2	900	1529	1.5 PSID		
3	1125	1911	1.5 PSID		


Note: Maximum efficiency occurs at stated flows.

11

Premium Filters



How to Order: Filters (Particulate, Coalescing & Adsorbing)

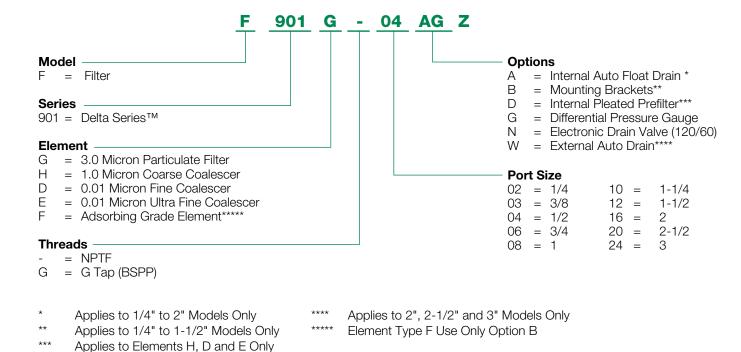

Optional Internal Pleated Prefilter (See option D in the "How to Order" for Coalescing Filters.)

Numatics Delta Series[™] filters are premium quality filters which include an optional 3.0 micron, internal pleated prefilter. This prefilter provides protection for the fine borosilicate fibers by removing over 97.5% of 3.0 micron and larger particles, extending the life of the filter element.

Pressure and Temperature Specifications – Adsorbing Grade

Filter Option - Adsorbing Element Grade - F	
PORT SIZE	ALL
Max. Pressure PSI (Bar)	250 (17)
Max. Temperature °F (°C)	200 (95)
Min. Temperature °F (°C)	-15F (-26C)

Note: Option combinations default to lower pressure and temperature rating.

The only optional feature applicable for the adsorbing grade element is the mounting bracket (Option B).

Pressure and Temperature Specifications – Particulate and Coalescing Grades

Filter Option		A	G	N	W
Elements - G, H, D, E	None	Float Drain	Delta P Gauge	Elect. Drain	Ext. Drain
Port Size	ALL	1/4 to 2	1/4 to 3	1/4 to 3	2, 2-1/2, 3
Max. Pressure PSI (Bar)	250 (17)	250 (17)	250 (17)	250 (17)	230 (16)
Max. Temperature °F (°C)	200 (95)	150 (66)	175 (80)	130 (55)	120 (50)
Min. Temperature °F (°C)*			-15F (-26C)		

Note: Option combinations default to lower pressure and temperature rating.


*Air supply must be dry enough to avoid the formation of ice at temperatures below 32°F (0°C).

Filters Combinations



Recommended Filter Combinations - Industry Applications

Flow rates for filter combinations

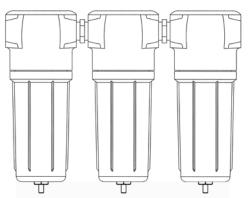

ISO 8573 - The Compressed Air Quality Standard

	S	olid		Water			
Class	Maximum particle size		Maximum Maximum Concentration**		n Pressure /point		aximum ntration**
	(µm)	ppm (mg/m3)		degrees F	(degrees C)	ppm	(mg/m3)
1	0.1	0.08	(0.1)	-94	(-70)	0.008	0.01
2	1	0.8	(1)	-40	(-40)	0.08	0.01
3	5	4.2	(5)	-4	(-20)	0.83	1
4	15	6.7	(8)	37	(+3)	4.2	5
5	40	8.3	(10)	45	(+7)	21	25
6	-	-	-	50	(+10)	-	-

^{*} Particle size is based on a filtration ratio 20. The minimum accuracy of the measuring

method used is 21% of the limiting value of the class.

** At 14.7 PSI (1 bar) absolute pressure, +70°F (+20°C) and a relative humidity of 60%. It should be noted that at pressures above atmospheric the contaminant concentration is higher.

	December of Filter	Port Size					
Applications	Recommended Filter	1/4	3/8	1/2	3/4	1	
••	Element Combinations	-	Based on 1	00 PSI (7 bar) inlet -	A P 1.5 PSID		
Between aftercooler and dryer	X → H	32 (54)	N/A	65 (108)	132 (220)	196 (327)	
Blow molding	$G \rightarrow D \rightarrow F$	20 (33)	32 (54)	38 (64)	71 (119)	100 (167)	
Breathing air	$G \rightarrow D \rightarrow F$	11 11		" "	11 11	11 11	
Compressed air measuring instruments	$G \rightarrow D$	27 (44)	37 (62)	44 (73)	88 (148)	120 (200)	
Compressed air motors	$G \rightarrow D$	11 11	" "	" "	11 11	" "	
Electronic	$G \rightarrow H \rightarrow E$	19 (32)	24 (39)	30 (50)	61 (101)	96 (160)	
Film laboratories	$G \rightarrow D \rightarrow F$	20 (33)	32 (54)	38 (64)	71 (119)	100 (167)	
Food packaging	$G \rightarrow D \rightarrow F$	11 11	11 11	11 11	11 11	11 11	
Hospital services	$G \rightarrow D \rightarrow F$	11 11	11 11	11 11	11 11	11 11	
Paint spraying systems	$G \rightarrow D$	27 (44)	37 (62)	44 (73)	88 (148)	120 (200)	
Paint spraying systems (critical)	$G \rightarrow D \rightarrow F$	20 (33)	32 (54)	38 (64)	71 (119)	100 (167)	
Pharmaceutical industry	$G \rightarrow D \rightarrow F$	11 11	11 11	11 11	11 11	11 11	
Pneumatic control systems	$G \rightarrow D$	27 (44)	37 (62)	44 (73)	88 (148)	120 (200)	
Pneumatic conveying systems	$G \rightarrow D$	11 11	п п	11 11	11 11	п п	
Pneumatic tools	$G \rightarrow D$	11 11	11 11	11 11	11 11	11 11	
Precision analyzers	$G \rightarrow H \rightarrow F$	22 (38)	36 (60)	46 (77)	86 (143)	133 (223)	
Process air	$H \rightarrow D \rightarrow F$	19 (32)	31 (52)	37 (62)	69 (116)	98 (163)	
Surface treatment	$G \rightarrow H \rightarrow D$	23 (39)	32 (53)	38 (63)	77 (129)	108 (181)	
		Size					
Applications	Recommended Filter Element Combinations	1-1/4	1-1/2	2	2-1/2	3	
	Element Compinations		Based on 1	00 PSI (7 bar) inlet -	P 1.5 PSID		
Between aftercooler and dryer	X → H	N/A	377 (630)	745 (1244)	N/A	1283 (2142)	
Blow molding	$G \rightarrow D \rightarrow F$	180 (301)	219 (365)	436 (727)	564 (941)	675 (1126)	
Breathing air	$G \rightarrow D \rightarrow F$	11 11	н н	11 11	11 11	11 11	
Compressed air measuring instruments	$G \rightarrow D$	225 (376)	275 (459)	556 (929)	723 (1207)	844 (1408)	
Compressed air motors	$G \rightarrow D$	" "	п п	" "	11 11	п п	
Electronic	$G \rightarrow H \rightarrow E$	160 (266)	192 (320)	372 (621)	479 (799)	598 (999)	
Film laboratories	$G \rightarrow D \rightarrow F$	180 (301)	219 (365)	436 (727)	564 (941)	675 (1126)	
Food packaging	$G \rightarrow D \rightarrow F$	11 11	11 11	11 11	11 11	11 11	
Hospital services	$G \rightarrow D \rightarrow F$	" "	" "	" "	11 11	" "	
Paint spraying systems	$G \rightarrow D$	225 (376)	275 (459)	556 (929)	723 (1207)	844 (1408)	
Paint spraying systems (critical)	$G \rightarrow D \rightarrow F$	180 (301)	219 (365)	436 (727)	564 (941)	675 (1126)	
Pharmaceutical industry	$G \rightarrow D \rightarrow F$	" "	11 11	" "	11 11	11 11	
Pneumatic control systems	$G \rightarrow D$	225 (376)	275 (459)	556 (929)	723 (1207)	844 (1408)	
Pneumatic conveying systems	$G \rightarrow D$	11 11	11 11	11 11	11 11	11 11	
	$G \rightarrow D$	11 11	11 11	11 11	11 11	11 11	
Pneumatic tools	G . D						
Pneumatic tools Precision analyzers	$G \rightarrow H \rightarrow F$	226 (378)	273 (455)	528 (881)	679 (1133)	848 (1416)	
		226 (378) 179 (299)	273 (455) 217 (362)	528 (881) 434 (724)	679 (1133) 561 (937)	848 (1416) 672 (1122)	

Filter element grades

X = water separator

G = 3.0 micron particulate filter H = 1.0 micron coarse coalescer D = 0.01 micron fine coalescer


E = 0.01 micron ultra fine coalescer

F = adsorbing grade filter

Water Separator & Filter Dimensions




Std. Manual Drain / Mounting Bracket Dimensions

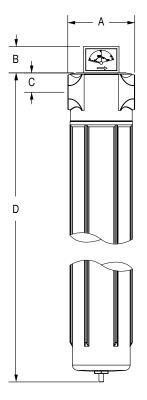

Mounting Bracket Kit

(Includes 2 brackets and required screws)

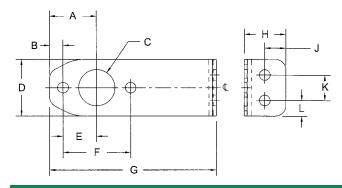

Dimensions: Inches (mm)

Model	A	В	С	D	E	F	G	Н	J	K	L
BRK9001	1.13	.32	Ø.88	1.38	.82	1.63	4.0	1.0	.5	.62	.38
(1/4-1/2 Models)	(29)	(8)	(Ø22)	(35)	(21)	(41)	(102)	(25)	(13)	(16)	(10)
BRK9002	1.5	.27	Ø1.94	2.5	1.24	2.47	5.0	1.0	.4	1.5	.5
(3/4-1 1/2 Models)	(38)	(7)	(Ø42)	(64)	(31)	(63)	(127)	(25)	(10)	(38)	(13)

Dimensions: Inches (mm)

Water Separator — inches (millimeters)

Port Size	Weight Ibs (kg)	A	В	C	D	E
1/4	2.9 (1.32)	3.7 (95)	N/A	0.79 (20)	9.4 (238)	1.5 (38)
1/2	2.9 (1.32)	3.7 (95)	N/A	0.79 (20)	9.4 (238)	1.5 (38)
3/4	5.4 (2.45)	4.6 (116)	N/A	1.32 (34)	10.8 (274)	1.5 (38)
1	5.4 (2.45)	4.6 (116)	N/A	1.32 (34)	10.8 (274)	1.5 (38)
1-1/2	5.4 (2.45)	4.6 (116)	N/A	1.32 (34)	10.8 (274)	1.5 (38)
2	12.05 (5.47)	6.3 (160)	N/A	1.70 (43)	13.0 (332)	2.0 (51)
3	36.0 (16.36)	11.0 (280)	N/A	2.9 (73)	17.3 (440)	2.0 (56)

*Notes

"D" dimension includes manual drain.


The "E" dimension refers to the amount of space needed below the bottom of the bowl in order to remove the bowl.


Filter Dimensions — inches (millimeters)

Port Size	Weight lbs (kg)	A	В	С	D	E
1/4	2.95 (1.34)	3.7 (95)	1.8 (46)	0.79 (20)	9.38 (238)	1.8 (46)
3/8	2.95 (1.34)	3.7 (95)	1.8 (46)	0.79 (20)	9.38 (238)	1.8 (46)
1/2	2.95 (1.34)	3.7 (95)	1.8 (46)	0.79 (20)	9.38 (238)	1.8 (46)
3/4	7.10 (3.22)	4.6 (116)	1.8 (46)	1.32 (34)	14.69 (373)	1.8 (46)
1	7.10 (3.22)	4.6 (116)	1.8 (46)	1.32 (34)	14.69 (373)	1.8 (46)
1-1/4	9.25 (4.20)	4.6 (116)	1.8 (46)	1.32 (34)	21.07 (535)	1.8 (46)
1-1/2	9.25 (4.20)	4.6 (116)	1.8 (46)	1.32 (34)	21.07 (535)	1.8 (46)
2	22.7 (10.30)	6.3 (160)	1.8 (46)	1.69 (43)	26.80 (681)	1.8 (46)
2-1/2	55.0 (25.0)	11.0 (280)	1.8 (46)	2.9 (73)	30.0 (762)	2.2 (56)
3	55.0 (25.0)	11.0 (280)	1.8 (46)	2.9 (73)	30.0 (762)	2.2 (56)

Water Separator & Filter Dimensions

Option "W" Included

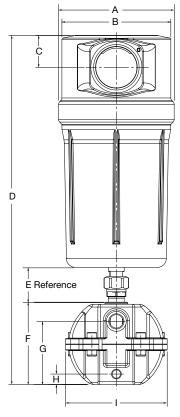

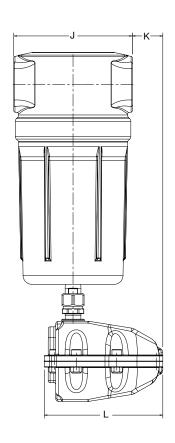

Water Separator - inches (millimeters)

Port Size	Weight lbs (kg)	A	В	С	D	E	F	G	Н	ı	J	К	L
2	16.05*	6.14	5.79	1.69	18.54	1.85	4.37	3.35	0.55	5.39	6.30	1.61	6.30
	(7.3)	(156)	(147)	(43)	(471)	(47)	(111)	(85)	(14)	(137)	(160)	(41)	(160)
3	40.0*	9.05	8.46	2.87	22.8	1.85	4.37	3.35	0.55	5.39	11.02	-0.75	6.30
	(18.2)	(230)	(215)	(73)	(579)	(47)	(111)	(85)	(14)	(137)	(280)	(-19)	(160)

^{*} Weight includes W option drain and bushing.

Filter Dimensions — inches (millimeters)

Port Size	Weight lbs (kg)	A	В	C	D	E	F	G	Н	ı	J	K	L
2	26.7*	6.14	5.79	1.69	32	1.85	4.37	3.35	0.55	5.39	6.30	1.61	6.30
	(12.14)	(156)	(147)	(43)	(813)	(47)	(111)	(85)	(14)	(137)	(160)	(41)	(160)
2-1/2	59.0*	9.05	8.46	2.87	36.5	1.85	4.37	3.35	0.55	5.39	11.02	-0.75	6.30
	(26.82)	(230)	(215)	(73)	(927)	(47)	(111)	(85)	(14)	(137)	(280)	(-19)	(160)
3	59.0*	9.05	8.46	2.87	36.5	1.85	4.37	3.35	0.55	5.39	11.02	-0.75	6.30
	(26.82)	(230)	(215)	(73)	(927)	(47)	(111)	(85)	(14)	(137)	(280)	(-19)	(160)

^{*} Weight includes W option drain and bushing.

Replacement Parts and Kits



Replacement Elements - 901 Series

Renlacement Flei	Replacement Elements Kit						
-	includes filter element and seal						
1							
Kit #	Description						
1/4, 3/8, & 1/2 Un	nits						
EKF9004G-B	3.0 micron micron particulate						
EKF9004H-B	1.0 micron coarse coalescing						
EKF9004HD-B	1.0 micron coarse coalescing w/ pleated prefilter						
EKF9004D-B	0.01 micron fine coalescing						
EKF9004DD-B	0.01 micron fine coalescing w/ pleated prefilter						
EKF9004E-B	0.01 micron ultra fine coalescing						
EKF9004ED-B	0.01 micron ultra fine coalescing w/ pleated prefilter						
EKF9004F-B	adsorbing						
Element Only - Weight 0.35 lbs (.16 kg) for all sizes							

3/4 & 1 Units					
EKF9008G-B	3.0 micron micron particulate				
EKF9008H-B	1.0 micron coarse coalescing				
EKF9008HD-B	1.0 micron coarse coalescing w/ pleated prefilter				
EKF9008D-B	0.01 micron fine coalescing				
EKF9008DD-B	0.01 micron fine coalescing w/ pleated prefilter				
EKF9008E-B	0.01 micron ultra fine coalescing				
EKF9008ED-B	0.01 micron ultra fine coalescing w/ pleated prefilter				
EKF9008F-B	adsorbing				
Element Only - Weight 1.0 lbs (.45 kg) for all sizes					

1 1/4 & 1 1/2 Units	S				
EKF9012G-B	3.0 micron particulate				
EKF9012H-B	1.0 micron coarse coalescing				
EKF9012HD-B	1.0 micron coarse coalescing w/ pleated prefilter				
EKF9012D-B	0.01 micron fine coalescing				
EKF9012DD-B	0.01 micron fine coalescing w/ pleated prefilter				
EKF9012E-B	0.01 micron ultra fine coalescing				
EKF9012ED-B	0.01 micron ultra fine coalescing w/ pleated prefilter				
EKF9012F-B	adsorbing				
Element Only - Weight 1.85 lbs (.84 kg) for all sizes					

2 Units					
EKF9016G-B	3.0 micron micron particulate				
EKF9016H-B	1.0 micron coarse coalescing				
EKF9016HD-B	1.0 micron coarse coalescing w/ pleated prefilter				
EKF9016D-B	0.01 micron fine coalescing				
EKF9016DD-B	0.01 micron fine coalescing w/ pleated prefilter				
EKF9016E-B	0.01 micron ultra fine coalescing				
EKF9016ED-B	0.01 micron ultra fine coalescing w/ pleated prefilter				
EKF9016F-B	adsorbing				
Element Only - Weight 3.6 lbs (1.64 kg) for all sizes					

2 1/2 & 3 Units					
EKF9024G-B	3.0 micron micron particulate				
EKF9024H-B	1.0 micron coarse coalescing				
EKF9024HD-B	1.0 micron coarse coalescing w/ pleated prefilter				
EKF9024D-B	0.01 micron fine coalescing				
EKF9024DD-B	0.01 micron fine coalescing w/ pleated prefilter				
EKF9024E-B	0.01 micron ultra fine coalescing				
EKF9024ED-B	0.01 micron ultra fine coalescing w/ pleated prefilter				
EKF9024F-B	adsorbing				
Element Only - Weight 6.35 lbs (2.88 kg) for all sizes					

Bowl Replacement includes bowl only	
Bowl #	Description
BKF9001-B	for 1/4, 3/8, & 1/2 units
BKF9002-B	for 3/4 & 1 units
BKF9004-B	for 1-1/4 & 1-1/2 units
BKF9005-B	for 2 unit
BKF9006-B	for 2-1/2 & 3 units

Separator Bowl includes bowl only	
Bowl #	Description
BKF9001-B	for 1/4 & 1/2 units
BKF9004S-B	for 3/4, 1, 1-1/2
BKF9005S-B	for 2 units
BKF9006S-B	for 3 units

Filter & Separator Head Replacement Seals includes o-ring only	
FPHS9001-04	for 1/4, 3/8, & 1/2 units
FPHS9001-12	for 3/4, 1, 1-1/4, & 1-1/2 units
FPHS9001-16	for 2 units
FPHS9001-20	for 2-1/2 & 3 units



World Headquarters

USA Numatics, Incorporated

46280 Dylan Drive Novi, Michigan 48377

P: 248-596-3200 F: 248-596-3201

LT-Delta Rev 1/13

Canada Numatics, Ltd

P: 519-758-2700 F: 519-758-5540

México - Ascomatica SA de CV

P: 52 55 58 09 56 40 (DF y Area metropolitana) P: 01 800 000 ASCO (2726) (Interior de la República) F: 52 55 58 09 56 60

Brazil Ascoval Ind.e Comercio Ltda

P: (55) 11-4208-1700 F: (55) 11-4195-3970

Numatics, Inc. | Tel (248) 596-3200 | www.numatics.com | email: insidesales@numatics.com

© Numatics Inc. 2009 - 2013 U實島樂號曾凱陀設器有限公司 地址:中国·青岛市重庆南路99号海尔云街甲3号楼7F

服务热线:4006-918-365 网址:http://www.ivalve.cc 传真:(86-532)585-10-365 Email: sales@bechinas.com